


**Part List of the engine 1 E34FL for ABG – SLP600B**

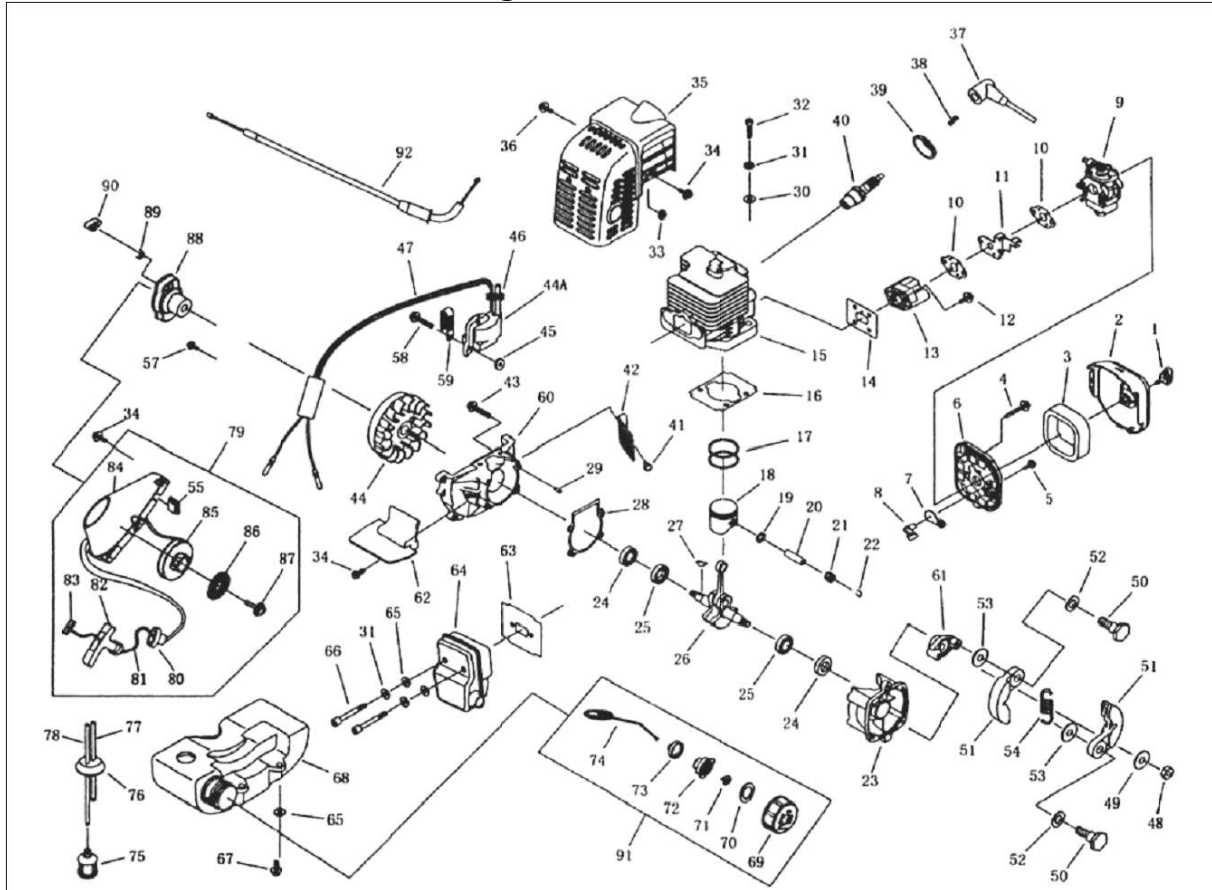

Pos.	Ord. No.	Name	Pcs	Pos.	Ord. No.	Name	Pcs	Pos.	Ord. No.	Name	Pcs
1	1E34F.1.2	Screw	1	32	GBT70.1	Screw M5x25	2	62	1E32FL-8	Brace	1
2	1E34F.1-4	Outside cover	1	33	1E32FL-4	Gasket	1	63	1E34F-3	Gasket	1
3	1E34F.1-1	Filter net	1	34	GB9074.4	Screw M4x16	6	64	1E32FL.1	Muffler ass'y	1
4	GB9074.4	Screw M5x55	2	35	1E32FL-2	Guide cover	1	65	GB96	Washer 5	5
5	GB845	Screw ST4.2x12	1	36	GB845	Screw ST4.2x18	1	66	GBT70.1	Screw M5x50	2
6	1E34F.1.1	Inside cover	1	37	1E34F.5-2	Cap	1	67	GB9074.3	Screw M5x16	3
7	1E34F.1-3	Choke	1	38	1E40F-3A.8-2	Spring	1	68	1E32FL.6.1	Fuel tank	1
8	1E34F.1-2	Choke handle	1	39	1E34F.5-3	Plug cap	1	69	1E32FL.6.2-1	Fuel tank lid	1
9	1E34FL.3	Carburettor	1	40	RCJ6Y	Spark plug	1	70	CG420.1.3.1-2	Gasket	1
10	1E34F-1	Gasket	2	41	GB9074.4	Screw M5x10	1	71	EB-415.4.1.1-1	Inlet	1
11	1E32FL-1	Stand	1	42	1E32FL-9	Guide cover	1	72	1E32FL.6.2-2	Inside lid	1
12	GB9074.4	Screw M5x20	2	43	GB9074.4	Screw M5x30	4	73	1E32FL.6.2-3	Inside lid	1
13	1E34F.4	Admitting pipe ass'y	1	44	1E32FL.5.1	Fly wheel	1	74	1E32FL.6.2-4	Chain	1
14	1E34F-2	Gasket	1	44A	1E32FL.5.2	Coil	1	75	1E34F.9.2-3	Cleaner cover	1
15	1E34FL-1	Cylinder	1	45	1E32FL-6	Gasket	1	76	1E36FF.8.1-1	Plug	1
16	1E34F-9	Gasket	1	46	1E34F.5-1	Rubber plug	1	77	1E34F.9.2-1	Fuel pipe	1
17	1E34F.6-5	Piston ring	2	47	1E34F.5.1	Cord comp.	1	78	1E34F.9.2-2	Fuel pipe	1
18	1E34FL.6-6	Piston	1	48	GB6171	Nut M8x1	1	79	1E34FL.1	Starter	1
19	1E34F.6-1	Washer	2	49	GB97.1	Washer 8	1	80	1E34F.11.1-1	Pipe	1
20	1E34FL.6-3	Piston pin	1	50	1E34F-12	Screw pin	2	81	1E34F.11-3	Rope	1
21	1E34F.6-4	Bearing	1	51	1E34F.10.1	Expander ass'y	2	82	1E36F.1-1	Start handle	1
22	1E34F.6-2	Ring	2	52	1E34F-13	Washer	2	83	1E36F.1-5	Chain	1
23	1E32FL.4-1	Crank case	1	53	1E34F-11	Washer	2	84	1E34FL.11.1	Start cover ass'y	1
24	1E36F.2	Seal	2	54	1E34F.10-1	Spring	1	85	1E34F.11-2	Start rope reel	1
25	GBT276	Bearing 6001	2	55	1E32FL-10	Rubber plug	1	86	1E34F.11-1	Recoil spring	1
26	1E32FL.3.1	Crank shaft	1	56	-	-	-	87	GB9074.6	Screw M5x10	1
27	1E40FP-3Z.3-1	Key	1	57	GB9074.4	Screw M5x20	1	88	1E32FL.2	Start reel	1
28	1E34F.7-2	Gasket	1	58	GB9074.4	Screw M4x20	4	89	1E34F.8-1	Start claw	1
29	GBT119.2	Pin 3x10	2	59	1E40F-3A.9	Clip	2	90	1E34F.8-2	Start spring	1
30	GB848	Washer 5	2	60	1E32FL.4-2	Crank case	1	91	1E32FL.6.2	Fuel tank lid ass'y	1
31	GB93	Washer 5	4	61	1E32FL-3	Stand	1	92	SLP600B.1.2	Cable comp.	1